

LED Changeable Art Panel Light

Precautions



This luminaire is for indoor use only.



This luminaire should be connected to its dedicated LED driver.



Input voltage must comply with the range as specified on the LED driver.



Operating temperature range: -20°C~+40°C
Storage temperature range: -20°C~+50°C

- It is recommended that installation should be performed by professionals or certified electricians; and ensure that the power is turned off during installation, maintenance, and cleaning.
- Do not remove the warranty and manufacture labels, nor disassemble, repair, or modify the luminaire.
- Please ensure that the luminaire is complete and intact, and wires are not damaged nor broken before installation. In addition, please do not connect the luminaire with other electrical equipments in series.
- Please mind the sharp angles around the luminaire, and ensure that the luminaire is installed firmly to prevent it from falling and causing injuries.
- The LED driver is NOT recommended to lock directly on the back of the luminaire.
- Wipe the luminaire gently by soft cloth without any solvent when performing cleaning tasks to prevent the luminaire's surface from scratching or damaging.
- Please use the original carton provided when performing storing and delivery tasks; do not drop it, nor place items and weight on it.
- Please choose PVC or PET for the pattern material, with thickness 0.25mm-0.5mm, size (big) 571x571 ±2mm ; (small)276x276 ±2mm.

Simple troubleshooting

Problem	Possible causes	Troubleshooting
Unable to connect the luminaire to the LED driver.	Wrong plugging direction for the connector.	Change the plugging direction.
	Connector malfunction.	Please contact the distributor for customer service.
Luminaire fails to light up.	Power is not on.	Switch on the power.
	Connector or power cord is not properly connected.	Ensure all wires are properly connected.
	Luminaire or LED driver malfunction.	Please connect the luminaire with a driver which operates normally. If the luminaire works well, the original driver can be considered as malfunction. On the contrary, if the luminaire can not work, it is assumed malfunction. Please contact the distributor for customer service for repair.
Luminaire lights up partially, or does not light up at all.	LED light source malfunction.	Please contact the distributor for customer service.

Warranty

1. Service: Under normal usage, if the product is found to be defective within its warranty period, please send the product and the receipt back for repair.
2. The warranty is void if:
 - Incorrect voltage was applied to the product, or the product was installed improperly, or used in abnormal environment / under abnormal usage, or its precautions were not followed.
 - The product did not use the dedicated LED driver provided by us.
 - The product is repaired, modified, or altered in any way; or, the warranty and the manufacture labels were removed, damaged, or unrecognizable.
 - The failure was caused by the buyer's misbehavior or carelessness during transportation, delivery, or storage process after purchasing.
 - The failure was caused by natural disasters such as earthquake, or nibbles by mice or bugs etc.
 - The product was used or operated under special and harsh environments; for example, damp or sulphuric area, seashore area, on the ship, or other corrosive and erosive environments.
3. For further information regarding the product, please refer to our website or contact customer service.

 
LED Changeable Art Panel Light

Luminaire accessories


① Dedicated LED driver x 1

② Hanging ring x 2

③ Cap screw x 2

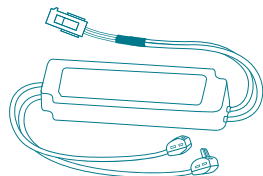

Installation guide

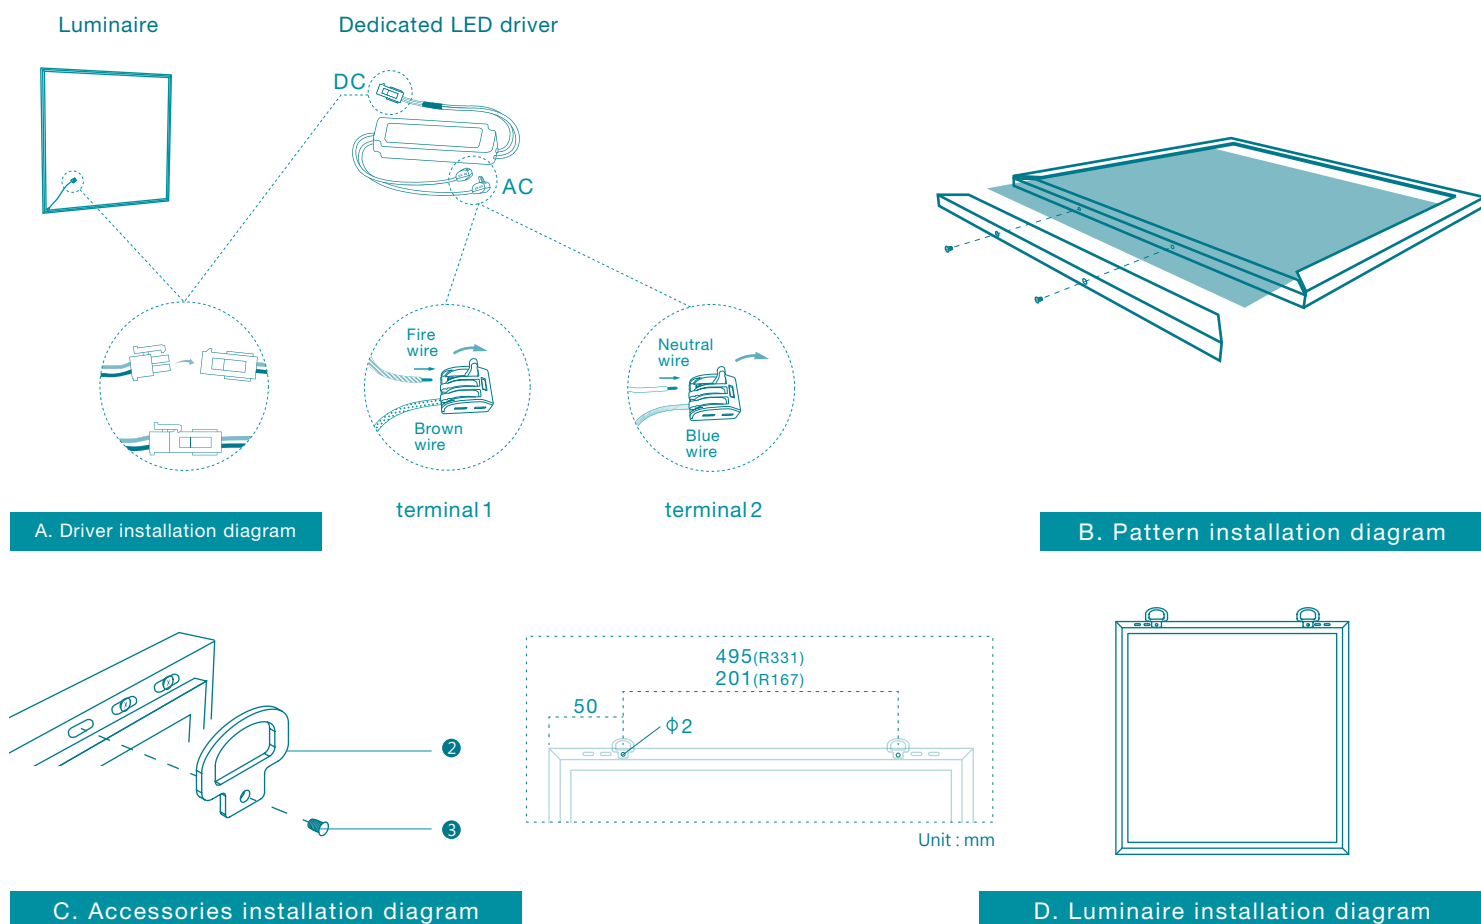 

1. Pattern Installation: Unscrew the side of frame and replace the pattern. (Diagram B)
2. Accessories Installation: Fix two hanging ring with cap screws of the reserved hole at the back of luminaire.
3. In order to place driver, cut out a hole of about 8cm diameter in ceiling.
4. Connect the luminaire to the LED driver by the following steps: (Diagram A)
 - a. Connect the luminaire and the driver into correct position and direction:
Connect the white connector from the red-black wire of the driver with the white connector from the LED panel in correct position and direction (red wire to red wire, black wire to black wire). The connectors should click perfectly with one another.
 - b. Connect the driver and power cord into correct position and direction :
Connect the power cord's ACL (Fire wire) with LED driver's brown wire (Fire wire), and connect the power cord's ACN (Neutral wire) with LED driver's blue wire (Neutral wire).
5. Place the driver in a proper place, and hanging the luminaire up. (Diagram D)
6. Precautions:
 - a. Terminals are provided at the end of the blue and brown wires. Pulling up the orange clip with a significant amount of force on the terminals will enable one to insert wires from the power cord. After wire inserted and the orange clips flipped back, the connection is complete.
 - b. Please choose PVC or PET for the pattern material, with thickness 0.25mm-0.5mm, size (big) 571x571 ±2mm ; (small) 276x276 ±2mm.
 - c. The transparent line is optional when the distance of driver and luminaire is too long.